

6.41.0M87

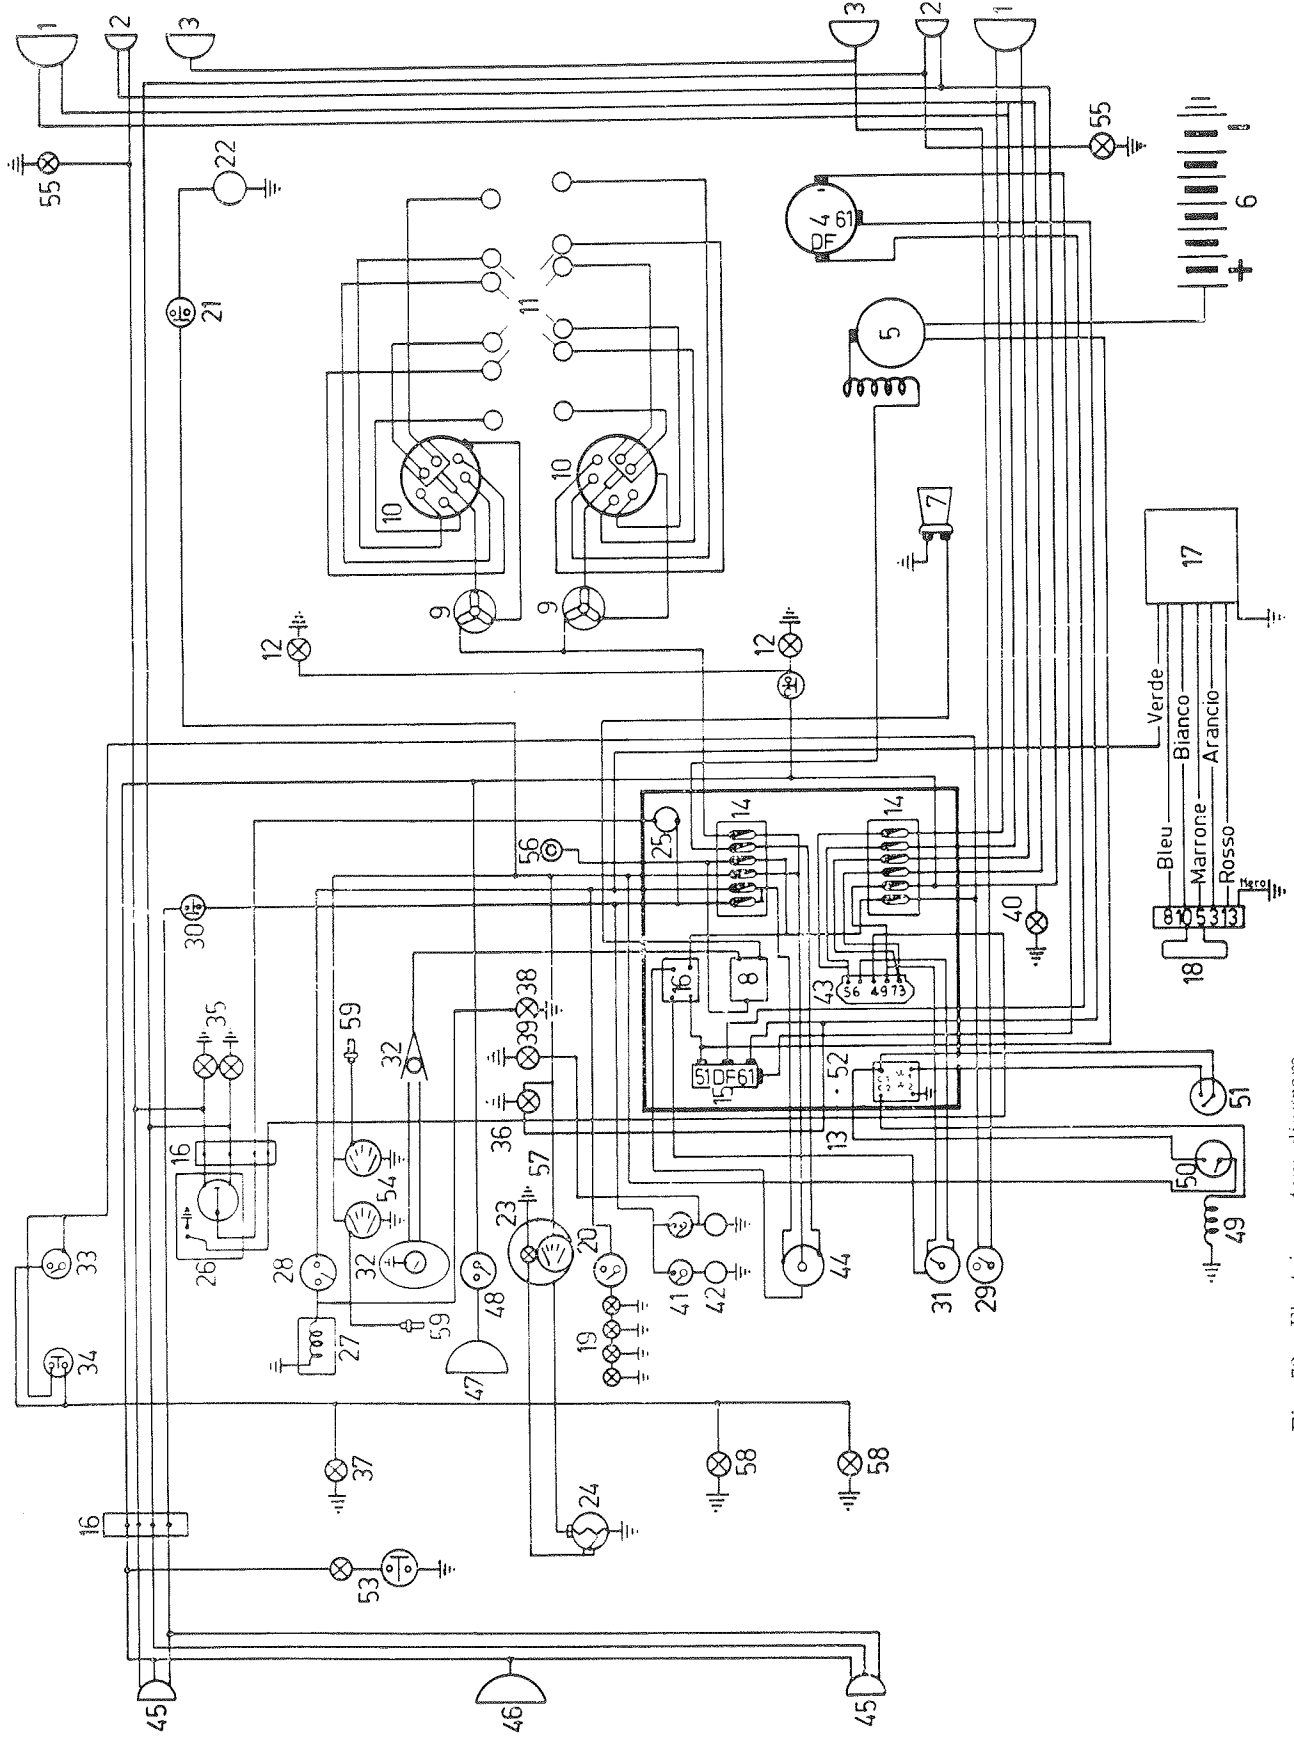


Fig. 72 - Electric system diagram.

(NOTE: Code is for electrical chart on opposite page.)

C A P T I O N

- 1) Headlamps and dip
- 2) Front lights and indicators
- 3) Fog lights
- 4) Dynamo
- 5) Starter
- 6) Battery
- 7) Horn
- 8) Horn relays
- 9) Ignition coils
- 10) Distributor
- 11) Spark plugs
- 12) Bonnet light
- 13) Panel
- 14) Installation fuses
- 15) Dynamo regulator
- 16) Terminal board
- 17) Windscreen wiper motor  
(2 speeds)
- 18) Switch for a/m. motor
- 19) Panel lights
- 20) Rheostat for panel
- 21) Thermocontact driving the fan
- 22) Fan for radiator
- 23) Petrol gauge
- 24) Tank level
- 25) Direction indicator relays
- 26) Commutator with direction  
indicator
- 27) Electric pump
- 28) Electric pump switch
- 29) Fog light switch
- 30) Hydraulic switch for stop  
lights
- 31) Outside light commutator
- 32) Horn push button
- 33) Inside light switch
- 34) Automatic switch for inside  
lights
- 35) Direction indicator lights
- 36) Dynamo charge lights
- 37) Inside lights lamp
- 38) Indicating lamp for electric  
pump
- 39) Heater fan indicating lamp
- 40) Indicating lamp for headlights
- 41) Conditioner switches
- 42) Conditioner electric fans
- 43) Deviolux (Front light commu-  
tator relay)
- 44) Ignition switch
- 45) Rear lights
- 46) Number plate light
- 47) Reverse lamp
- 48) Reverse light switch (on the  
gearbox)
- 49) Solenoid Overdrive
- 50) Switch on gearbox driving the  
Overdrive
- 51) Switch below the steering for  
Overdrive
- 52) Relay driving the Overdrive
- 53) Boot light
- 54) Water and oil thermometers
- 55) Side direction indicators  
(arrows)
- 56) Lighter
- 57) Signaling light for fuel level
- 58) Side door lamps
- 59) Thermocontacts for water and  
oil thermometers